# Polaroid 10.4” Digital Picture Frame IDF-1030
# Operation Manual

***Buttons on the Digital Picture Frame***

***Installing a flash media card***

1. Find the slot that fits your flash media card.
2. Insert the card in the correct slot.
3. To remove the card, simply push it in slightly until it springs back out. Remove.

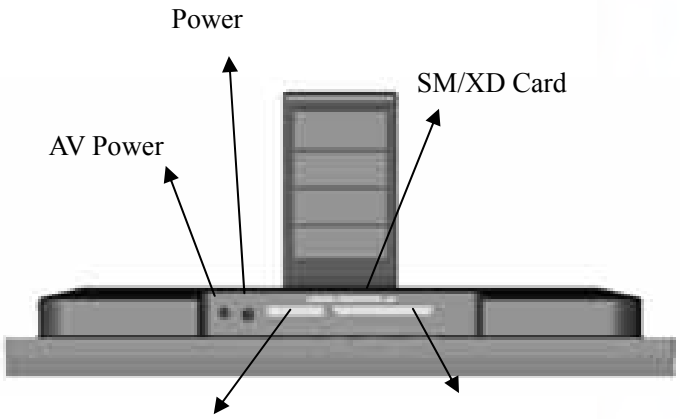


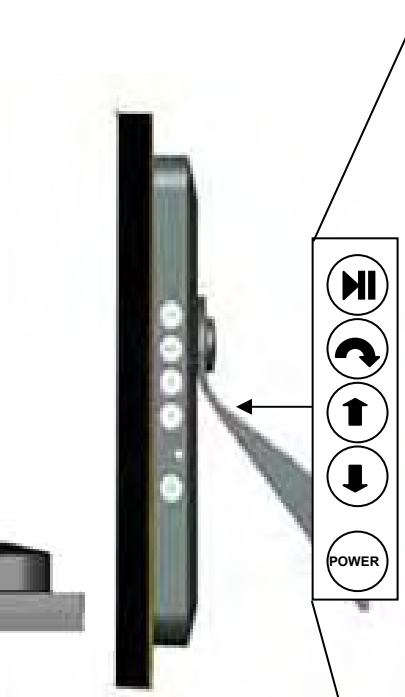


**Press & Hold Function:**
When you press and hold a button for 3 seconds or more it activates an additional function.

***Play/pause (when viewing photos)***
***Press***
Play/pause
***Press & Hold***
Enters “Menu” from any mode.

***Rotate (when viewing photos)***
***Press***
Rotates the picture
***Press & Hold***
Slideshow with music background

***Up arrow***
***Press (when viewing photos)***
Show previous picture
**Press (under music slideshow mode)**
Increase music volume
**Press (under Menu operation)**
Move up or go to previous
***Press & Hold***
Adjusts slide show interval time

***Down arrow***
**Press (when viewing photos)**
Shows next picture
**Press (under music slideshow mode)**
Decreases music volume
**Press (under Menu operation)**
Move down or go to next
***Press & Hold (when viewing photos)***
Transition mode selection

***Power***
Turns power on/off

***Replacing the Remote Control Battery***

1. Remove the battery compartment by pulling the cover in the direction of the arrow.
2. Remove old battery and dispose of correctly.
3. Insert new battery taking note of correct polarity (+/-).
4. Replace cover.

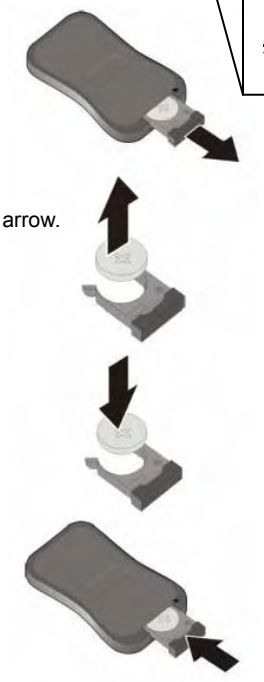

***Caution:***
*1.Only use a 3V CR2025 battery.*
*2.Dispose of used batteries according to local ordinance regulations.*
*3.Remove the battery when not using the Flash Player for prolonged periods.*

20060816

### *Buttons on the Remote control*

| |
|---|
| **POWER** button Press to turn player on or off. |
| **SETUP** button Press to open menu for changing settings. |
| **CARD SELECTION** button Press to choose a different memory card. |
| **MUSIC** button Press to go to and display music files. |
| **PHOTO** button Press to go to and display photo files. |
| **ROTATE** button Press to rotate photos 90 degrees clockwise on screen |
| **ZOOM** button Press to zoom up to 4x (on photos only) |
| **SLIDESHOW** button Press to start/stop a photo slideshow |
| **+ VOLUME** button Press to increase volume |
| **- VOLUME** button Press to decrease volume |
| **MUTE** button Press to instantly mute volume |
| ↑ button Press to move up when selecting files on your screen. |
| ← button Press to move left when selecting files on your screen. |
| ►‖ **PLAY/PAUSE** button Press to play/pause or confirm selections on your screen. |
| → button Press to move right when selecting files on your screen. |
| ↓ button Press to move down when selecting files on your screen. |
| **STOP** button Press to stop the selected file/action. |

### *Setting up the Digital Picture Frame*

1. Plug the appropriate end of the AC adapter into a power outlet and the other end into the Digital Picture Frame.
2. After you've stored content on a flash media card (not included), insert the card into the proper slot.
3. Turn the power switch to "ON". As a default the first file of the card will be displayed first. Play sequences are automatically sorted alphabetically by file name, regardless of file type.

### *Setting up the Digital Picture Frame*

1. Press the "MUSIC" key to enter the music database. Use the arrow keys to select a music file.
2. Press the SLIDESHOW key.
3. After you've stored content on a flash media card (not included), insert the card into the proper slot.
4. Turn the power switch to "ON". As a default the first file of the card will be displayed first. Play sequences are automatically sorted alphabetically by file name, regardless of file type.

"Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation, Waltham, MA, USA.

For service, support and warranty information, visit www.polaroid.com.